

## TASK: Woven Wood Continuous Loop Raises Crooked

Use If/When: Continuous loop shade is crooked when operated

Tools Needed: N/A

1. Check cords to make sure they are not tangled. Cords should make a smooth, flat path from the shaft, through the shaft bracket, then through the grommet.



2. Slide cord clips to the left or right along the shaft (while holding the shaft stationary) to correct small discrepancies in cord length.

