

TASK: Releasing Cord Lock – ½” and 1” Horizontal Aluminum

Use If/When: Cord lock will not release and the blind will not lower.

Tools Needed: Flathead screwdriver

Packing/shipping sometimes causes the roller in the cord lock to shift out of place. This normally occurs in new blinds and should be corrected with the first adjustment.

1. With one hand, raise the bottomrail slightly and support it. With the other hand, operate the cord to lower the blind.




If this does not correct, move to step 2.

2. Tilt the slats horizontally. Lift and lock the slats in the raised position. Remove the blind from the mounting brackets, by pushing the tab on the bracket away from the blind.



3. Look into the cord lock from the top of the headrail. Locate the dark serrated roller.

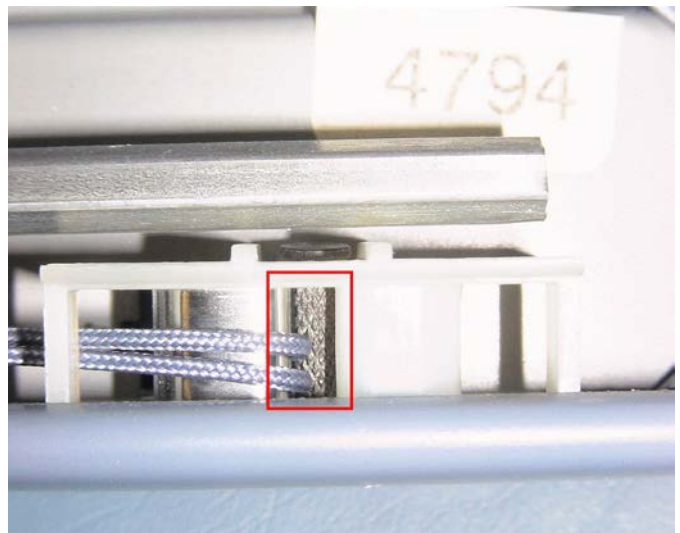

TASK: Releasing Cord Lock – ½” and 1” Horizontal Aluminum

Use If/When: Cord lock will not release and the blind will not lower.

Tools Needed: Flathead screwdriver

4. Use a small flathead screwdriver to push the serrated roller into position, horizontal and centered in the cord lock.



5. Reinstall blind in brackets.



6. Raise and lower the blind with the slats in the open position to make sure it operates properly.

