
 Springs Window Fashions Customer Service	Title:	Use If/When:
	Light Gap Between Headrail and Top Slat- 2" & Greater	Light Gap Between Headrail and Top Slat
Last Revised: 02/22/08		


Wand Tilt

Be sure the slats are fully tilted in the downward position. A wand tilter should be given an "extra turn" to completely close the gap between the headrail and the top slat. A larger blind will not tilt as easily as a smaller blind.

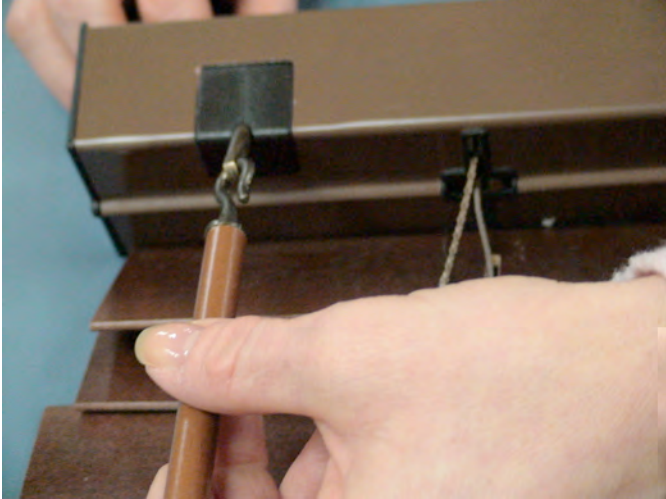

Cord Tilt

Be sure the slats are fully tilted in the downward position. A cord tilter should be given an "extra pull" to draw the slats to the headrail. A larger blind will not tilt as easily as a smaller blind.

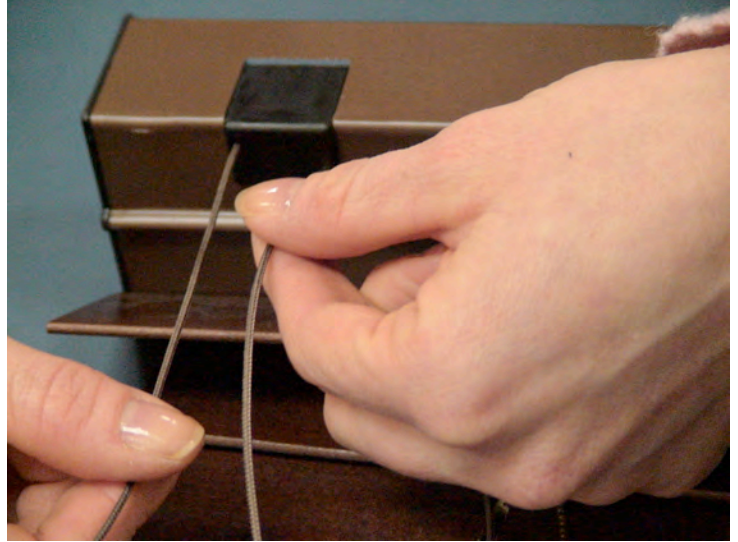


There is an acceptable gap allowed between the top slat and the headrail. See the chart below for specific information:

Product	Acceptable Light Gap	How To Measure
1" Slat Blinds	9/16" (+/- 1/16")	Slats Open
2" or Greater Slat Blinds	1/4" (+/- 1/16")	Slats Closed

Slats Open - measurements are taken between the bottom of the headrail and the top of the crown (curve) on the top slat with the slats in the open, level position.

Slats Closed - measurements are taken between the bottom of the headrail and the top edge of the tilted slat. The blind should be tilted fully closed, but should not start to raise.

 Springs Window Fashions Customer Service	Title:	Use If/When:
	Light Gap Between Headrail and Top Slat- 1/2" or 1"Slats	Light Gap Between Headrail and Top Slat
Last Revised: 02/15/08		

Wand Tilt

Be sure the blind is fully tilted. A wand tilter should be given an "extra turn" to completely close the gap between the headrail and the top slat. A larger blind will not tilt as easily as a smaller blind.



There is an acceptable gap allowed between the top slat and the headrail. See the chart below for specific information

Product	Acceptable Light Gap	How To Measure
1/2" Slat Blinds	3/8" (+/- 1/16")	Slats Open
1" Slat Blinds (Not Supreme)	9/16" (+/- 1/16")	Slats Open
1" Supreme	11/16" (+/- 1/16")	Slats Open
1" Privacy Supreme	3/4" (+/- 1/16")	Slats Open

Slats Open measurements are taken between the bottom of the headrail and the top of the crown (curve) on the top slat with the slats in the open, level position.