

TASK: Supplemental 3" SL (Skyline) fascia installation

Use If/When: Shade will not completely install into 3" SL (Skyline) fascia brackets or chain slides out of chain diverter.

Tools Needed: None

Shade will not completely seat into 3" SL fascia brackets or chain slides out of chain diverter.



- Wrong chain diverter
- Shade not correctly installed

Note:

- SL15
 - Used with SL10 & SL15 clutches
 - Two-piece diverter
- SL20
 - Used with the SL20 clutch
 - One-piece diverter, no cover


Determine if you have the correct chain diverter for your shade.

	SL15	SL20
• Covers	Yes	No
• Corners	Post	Empty Cavity
• Top	Tab	Flat
• Cutouts	Clutch shape grooves	Rectangular cutout near channels

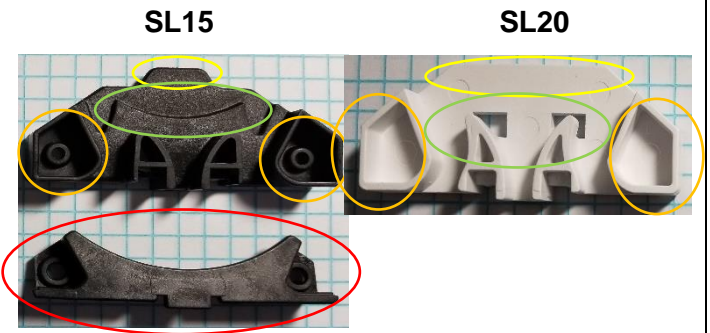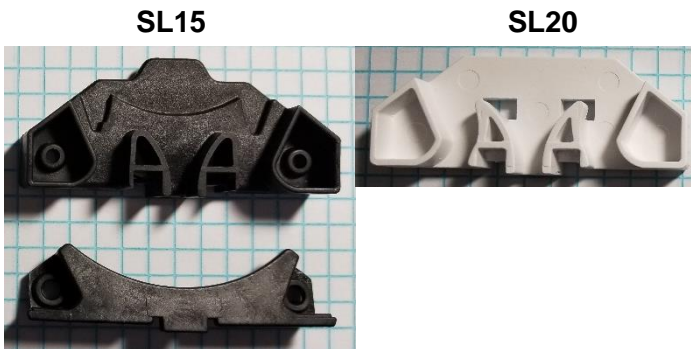

1.A. Make sure chain diverter is completely seated into the fascia bracket.

SL15 Chain Diverter

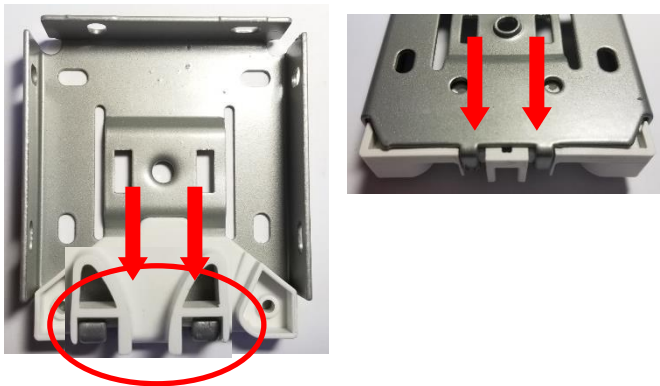

NOTE: Push down on diverter until it snaps into place and you can see the diverter drop slightly below bracket and into hooks.

1.B Make sure chain diverter is completely seated into the fascia bracket.

SL20 Chain Diverter



NOTE: Push down on diverter until the bottom rest in the hooks and the post slide into the holes in the fascia bracket.

TASK: Supplemental 3" SL (Skyline) fascia installation


Use If/When: Shade will not completely install into 3" SL (Skyline) fascia brackets or chain slides out of chain diverter.

Tools Needed: None

2. Align chain into center and back channels of the chain diverter when installing shade into brackets.



3. For SL15 chain diverter, snap cover onto diverter

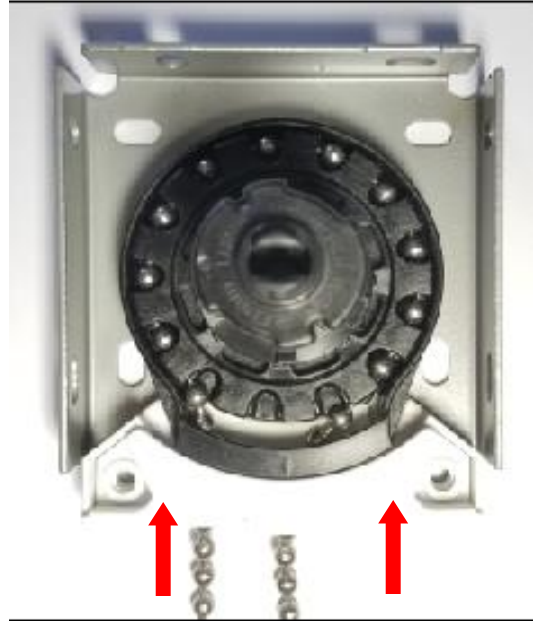

4. Snap fascia into brackets.

3" Fascia bracket
Soporte con lámina de 7.6 cm
Support de cantonnière fascia
de 3 po (7,6 cm)

